

Servo Intro



Level 1


Modules: Servo Motor



Wildcards



Events

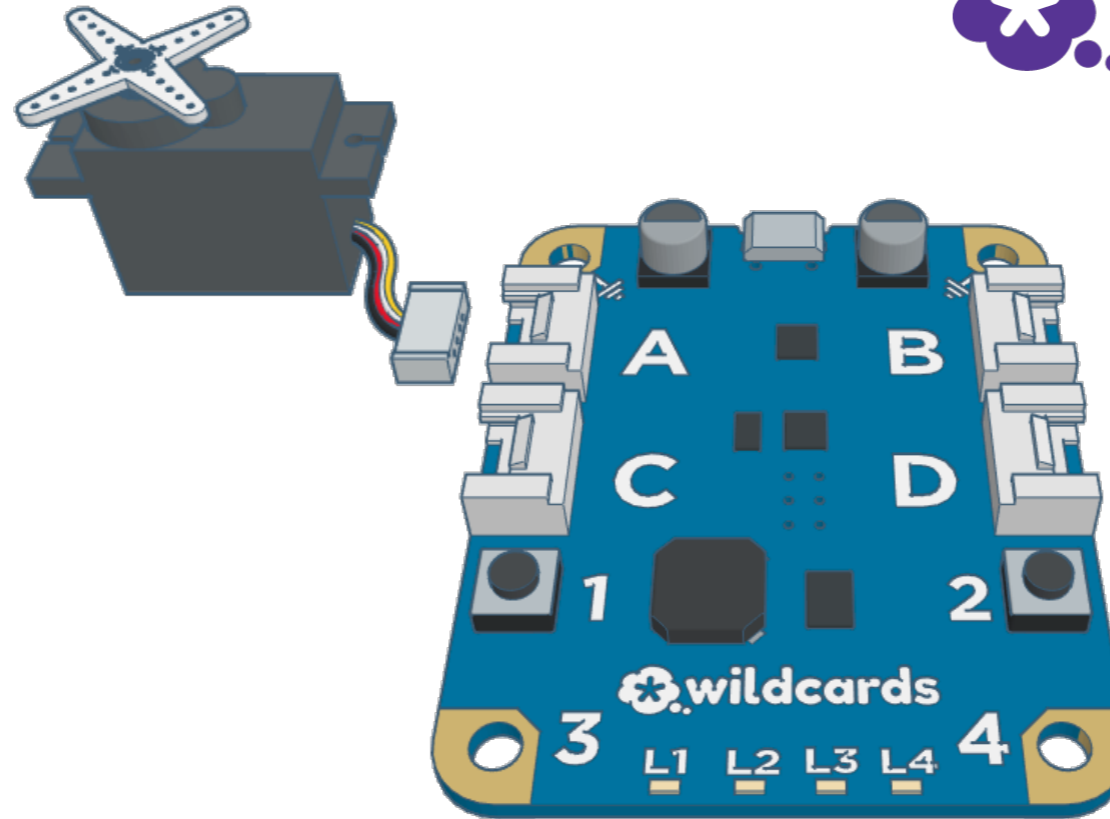

```
when down arrow key pressed
  set servo to 90 %: Connector A
```

```
when up arrow key pressed
  set servo to 10 %: Connector A
```